



HOPPER LIFT CABLE WEIGHT FOR MKX/X/HX100 AND MKX/X/HX130 SERIES AUGER MODELS INSTALLATION INSTRUCTIONS



Read and understand the safety information in the auger manual before proceeding.



Read and understand the instructions in this manual before attempting to install this product.



Refer to the auger manual for operation instructions.

1. Remove the two cable clamps and eye hook from the hopper winch cable.
2. Thread the hopper winch cable through the cylindrical cable weight.
3. Re-attach the eye hook to the cable and double back 7" (18 cm) of cable.
4. Secure the cable in place by installing and tightening the two existing 1/4" cable clamps (see Figure 2).
 - a. Apply the first clamp 6" (15.2 cm) from the cable loop with u-bolt over the dead end. Live end rests in clamp saddle. Tighten nuts evenly to recommended torque of 15 ft·lb.
 - b. Apply second clamp as close to loop as possible with the u-bolt over the dead end. Live end rests in clamp saddle. Apply tension and tighten nuts evenly to recommended torque of 15 ft·lb.

Westfield | Wheatheart

part of the Ag Growth International group
P.O. Box 39, Rosenort, Manitoba, R0G 1W0 Canada
Ph: (866) 467-7207 or (204) 746-2396 Fax: (866) 768-4852
Website: www.grainaugers.com | www.wheatheart.com
Email: sales@grainaugers.com | sales@wheatheart.com

Hutchinson | Mayrath

part of the Ag Growth International group
514 W. Crawford St., Clay Center, Kansas, 67432 USA
Ph: (800) 523-6993 or (785) 632-2161 Fax: (785) 632-5964
Website: www.hutchinson-mayrath.com
Email: sales@hutchinson-mayrath.com

© Ag Growth International Inc. 2018



PART NUMBER: 30991 R1
REVISED: 11/12/18

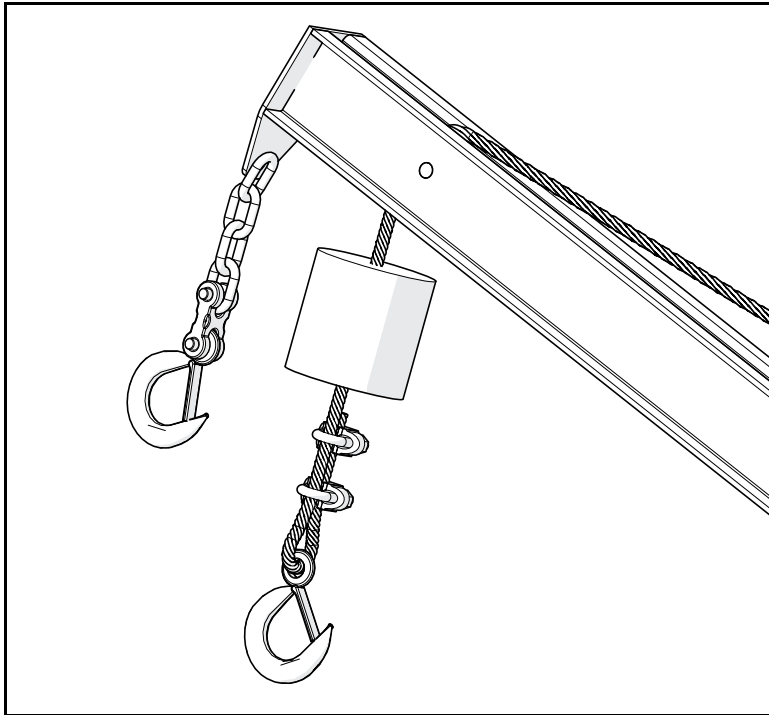


Figure 1 Cable Weight Installed

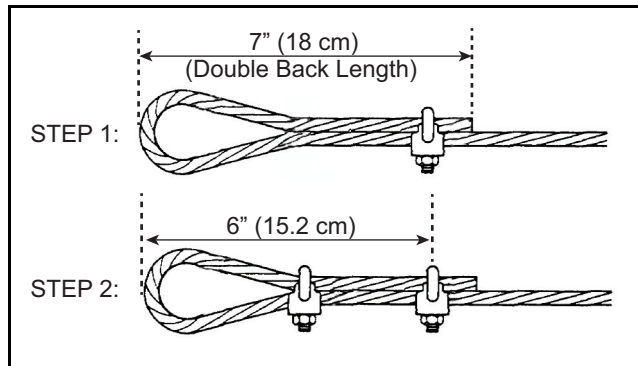


Figure 2 Install the Cable Clamp